





RGT 7137 FS

FMB 20 – FUSE



RGT 7140 FS

FMB 30 – FUSE



RGT 7143 FS

FMB 40 – FUSE



RGT 7138 FS

FF 60 – FUSE



RGT 7141 FS

FF 80 – FUSE



RGT 7144 FS

FHB 02 – FUSE



RGT 7139 FS

FHB 03 – FUSE





RGT 7142 FS






FM 10 – FUSE












RGT 7145 FS

FM 15 – FUSE

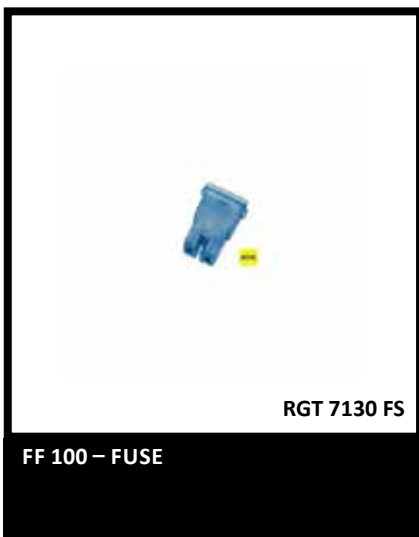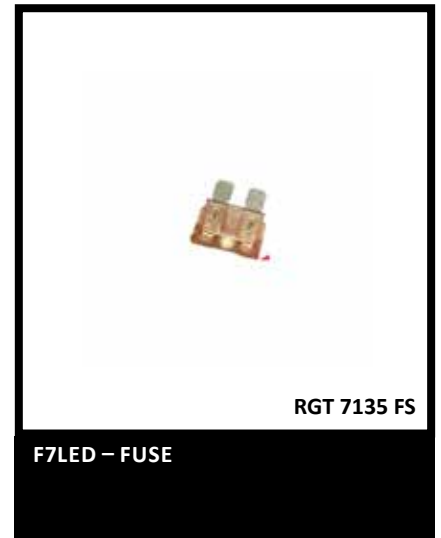

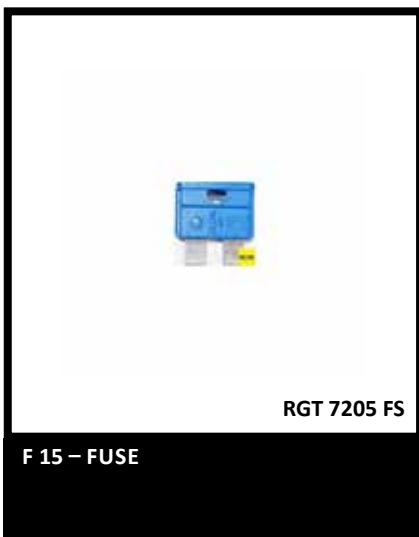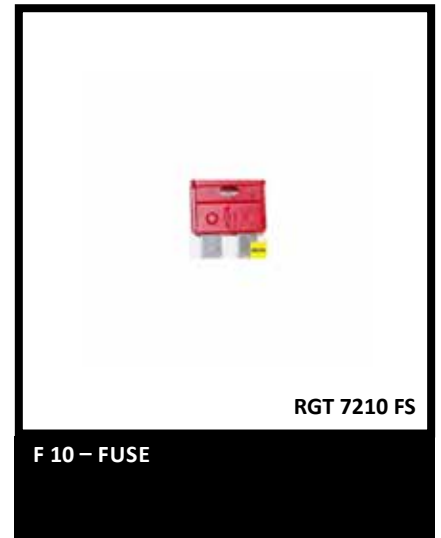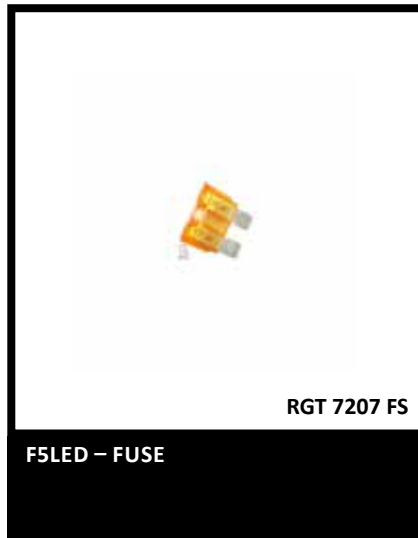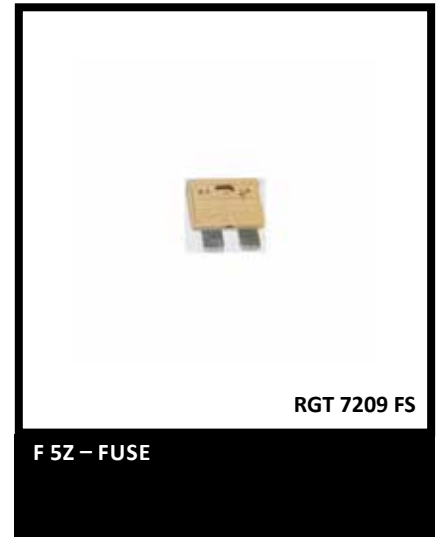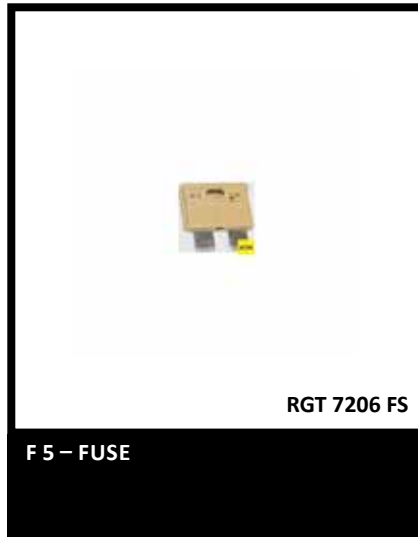

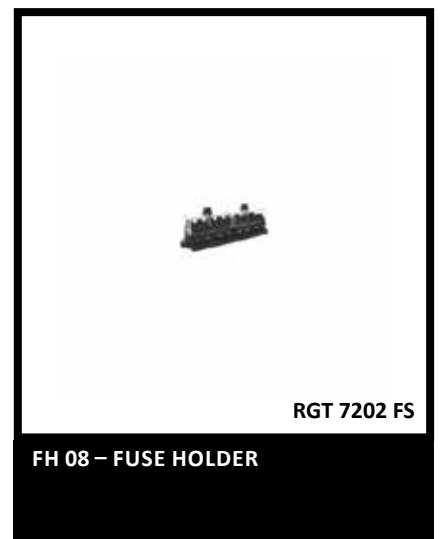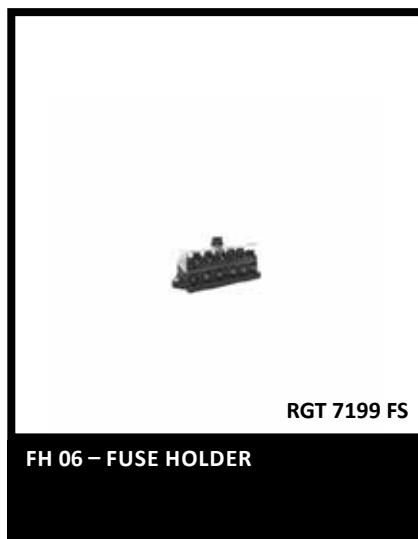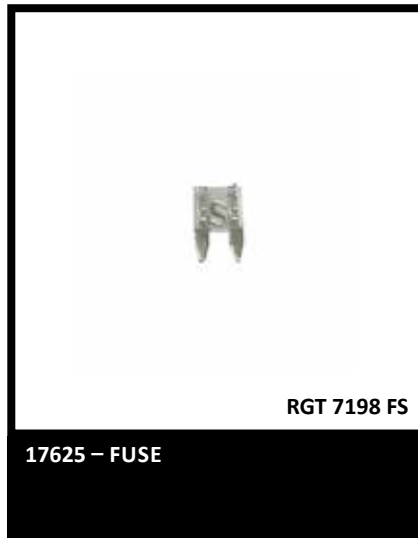

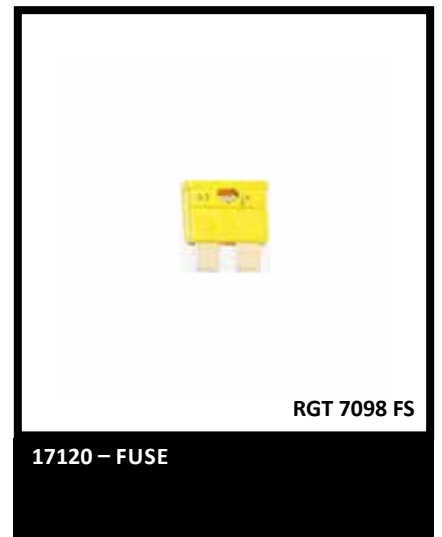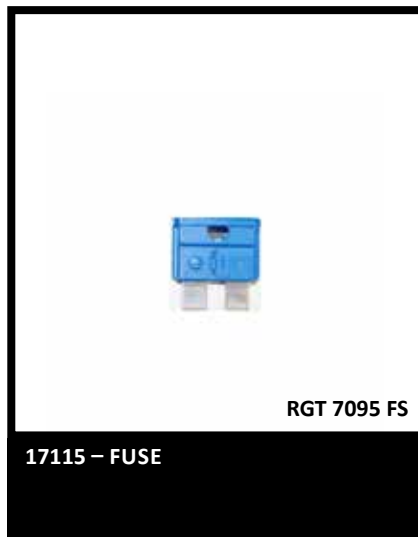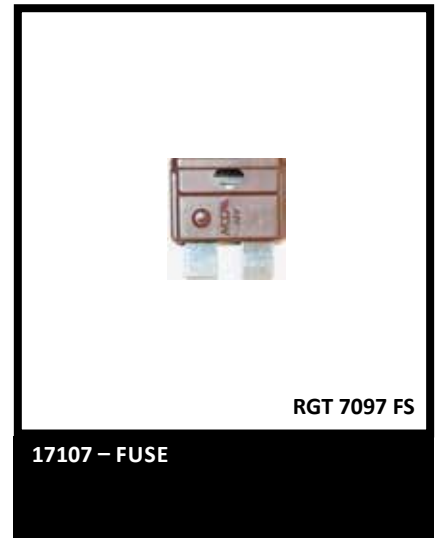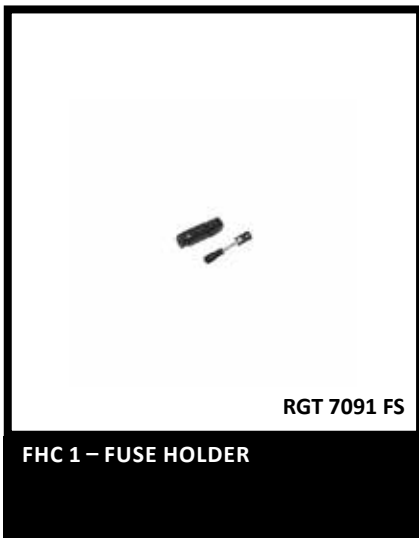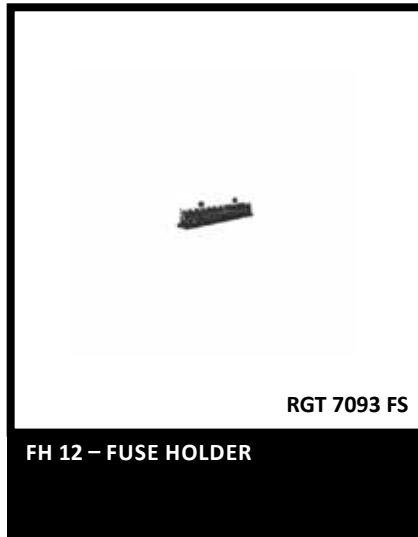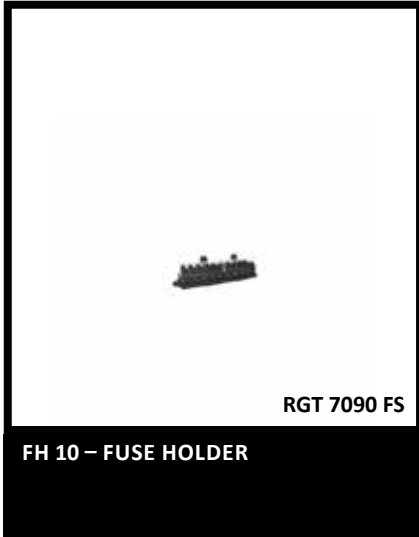















RGT 8049 SW

ROCK 4 – SWITCH



RGT 8051 SW

RS106E – SWITCH